# Multifunction Socket Tester


















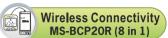



Digital display



Analogue display (Turn clockwise)



Real time graphic display (Turn anticlockwise)



Historical storage / photo with data filing (For iOS APP, please go to photo library to view the stored pictures and share)



Capture picture with data on screen display



Historical storage / data filing



Send / share file or photo



Data logger compatible

#### Advanced features of NCD (Must connect to the power source):

#### Identify Polarity and Broken Point!



Highest Reading on the wire indicates Live wire



Numerical reading '☐' or very low indicates broken point Incation

#### Check Gound / Earth Connection Of Electrical Appliances!





Refrigerator / Wine cabinet



Air-conditioner / Fan heater



heater



Electric kettle / Rice cooker / Toaster

Reading display > 2 approx. indicates NO Ground / Earth connected!

## Proper Connection Check



With the power OFF. Reading display > 2 approx. digits when the plug is inserted improperly, OR if the 'LIVE/HOT' wire is improperly connected to the plug



With the power OFF. Numerical reading 🗓 or very low indicates that wiring is properly connected



With the power OFF. Reading display > 2 approx. digits which indicates the switch is connected with 'Neutral' not 'Live wire



With the power OFF. Numerical reading ' 🖟 ' or very low indicates the switch already cut off from the 'Live' wire and the wiring is properly connected

#### Other Plugs Type Available



Schuko

US (110V) Thai (250V)

Reading display AC present



Numerical reading '□' or very low on the wire indicates fuse is blown!



 Instantaneously Check Fuse Blown >2 approx. digits,

# Multifunction Socket Tester



### Introduction:

MS-CP20R / MS-BCP20R, A multifunction Socket Tester for every electrician; DIY; etc. It is combined with 3 instruments for easy handling and testing . i.e.

- 1) DMM: It measures AC voltage of L-N and L-E as well as frequency.
- 2) Socket Tester: Identify wiring connections of socket and tests 30mA / 220V; >6mA / 110V RCD / ELCB trip condition.
- 3) NCV Tester: NCD combined with numerical digital display of AC signal strength with high sensitivity and precisely locate live wires; broken point; fuse blown; check proper connection of electrical appliances as well as Ground / Earthing connections. Loud increasing audible sound with large white / greeen / red backlight enhancement extra feedback.
- 4) MS-BCP20R is integrated with Bluetooth Wireless Connectivity to transmit data to Smart Phone / Tablet to view data, record reading, capture picture with data and send the information to headquarter.

### Specifications with unique features:

- 1) Identify wiring condition of electrical socket: Correct / LN Reverse / LE Reverse / LE Fault / N Fault / E Fault / \*\*Y' 'E' Reverse or 'L' / 'E' 'High' loop impedance (through non-tripped RCD test function)
- 2) LCD readout: LN Voltage / LE Voltage / Frequency
- 3) RCD / ELCB trip with 5 secs. delay executive feature: 30mA approx. / 220V ~ 250V AC; > 6mA / 110V AC
- 4) N-E / L-E / Loop impedance fault check (after approx. 5 secs. when RCD NOT tripped): Either 'N' / 'E' reversed OR 'L' / 'E' 'High' loop impedance
- 5) Audible sound feedback
- 6) 'NCD' alert detect: Audible and numerical display from 0 9 the AC signal strength, when>50V AC
- 7) White LED torch
- 8) Backlight: a) 'White' for normal visual b) 'Red' for 'FAULT' c) 'Green' for 'CORRECT' d) Tri state at NCD
- 9) 'Auto hold' measured data is convenient to tests hard-to-reach sockets and recall back the test results
- 10) Auto power off: 1 minute after plugged off
- 11) Transmit information to Smart phone / Tablet with iOS or Android apps (MS-BCP20R model only)
- 12) Remote RCD trip test function (MS-BCP20R model only)
- 13) Real time monitor Voltage / Frequency (MS-BCP20R model only)
- 14) Data logging through Smartphone / Tablet (MS-BCP20R model only)
- 15) Measurable voltage: 100 250VAC
  - (16) 110 / 220V AC Dual voltage operation
  - (<1.0) Low AC test current flow (<1.0mA) except on RCD trip test, suitable for testing on high sensitive leakage socket
  - 18) Measurable frequency: 40 70 Hz
  - 19) Battery operated: 2 x 1.5V AAA (RO3 / LRO3)
  - 20) Operating current: < 25mA max.
  - 21) Rating: 100 250V AC / 50 / 60 Hz / < 0.1A / CAT. II
  - 22) Low battery indication: Yes
  - 23) Reset: For emergency stop testing RCD / ELCB trip or operation
  - 24) Cal.: Enable to reduce AC sensitivity to zero when at NCD mode

## **Operations:**

1) Power (PWR) button: - Press and hold for 3 secs. to Power ON / OFF (wireless connectivity 'Tx.' automatically is activated / deactivated for MS-BCP20R model)



- After power ON, Press once to read out LN voltage / LE voltage / Frequency
- After the NCD function is activated, press once for NCD 'Cal.' mode (adjust the sensitivity to zero)

2) RCD/NCD button: **Dual Voltage** 

-Long press 5 secs. for RCD / ELCB trip when wiring properly connected OR N-E / L-E loop impedance fault check

-After plugged off, long press for ON/ OFF NCD detect function

-After plugged off, press once for white LED flash light / torch ON/OFF

3) Power (PWR) button + RCD/ELCB/ NCD button : - Press simultaneously to stop testing RCD/ ELCB or reset the **PWR** operation RCD trip



MEET International Ltd. MEET (China) LTD.

MANUFACTURER AND EXPORTER Flat 1509, 15/F., Westin Centre, 26 Hung To Road, Kwun Tong, Kowloon, Hong Kong

NCD

香港九龍觀塘鴻圖道26號威登中心15樓1509室

Website: www.meet.com.hk www.meetprofessional.com Tel: +852 29504689 E-mail: sales@meet.com.hk

www.meetishop.com



Sedex.













